

# PRIVEX®

## Digital Lever Lock

### User Manual / Installation Guide

#### SR500 Series SPECIFICATIONS

Dimensions (Panels with levers):  
5 3/16" (H) x 5 1/2" (W) x 2 3/4" (D)

Total Weight: 3.31lbs

Door Thickness: 1 3/16" — 2"

Adjustable Stainless Steel Latch




Power Supply:  
4AA Alkaline Batteries (included)

Digital Keypad

Temperature: -40°F — 185°F

Thank you for choosing the PRIVEX® SR500 Digital Lever Lock.  
Please keep this manual for future reference.

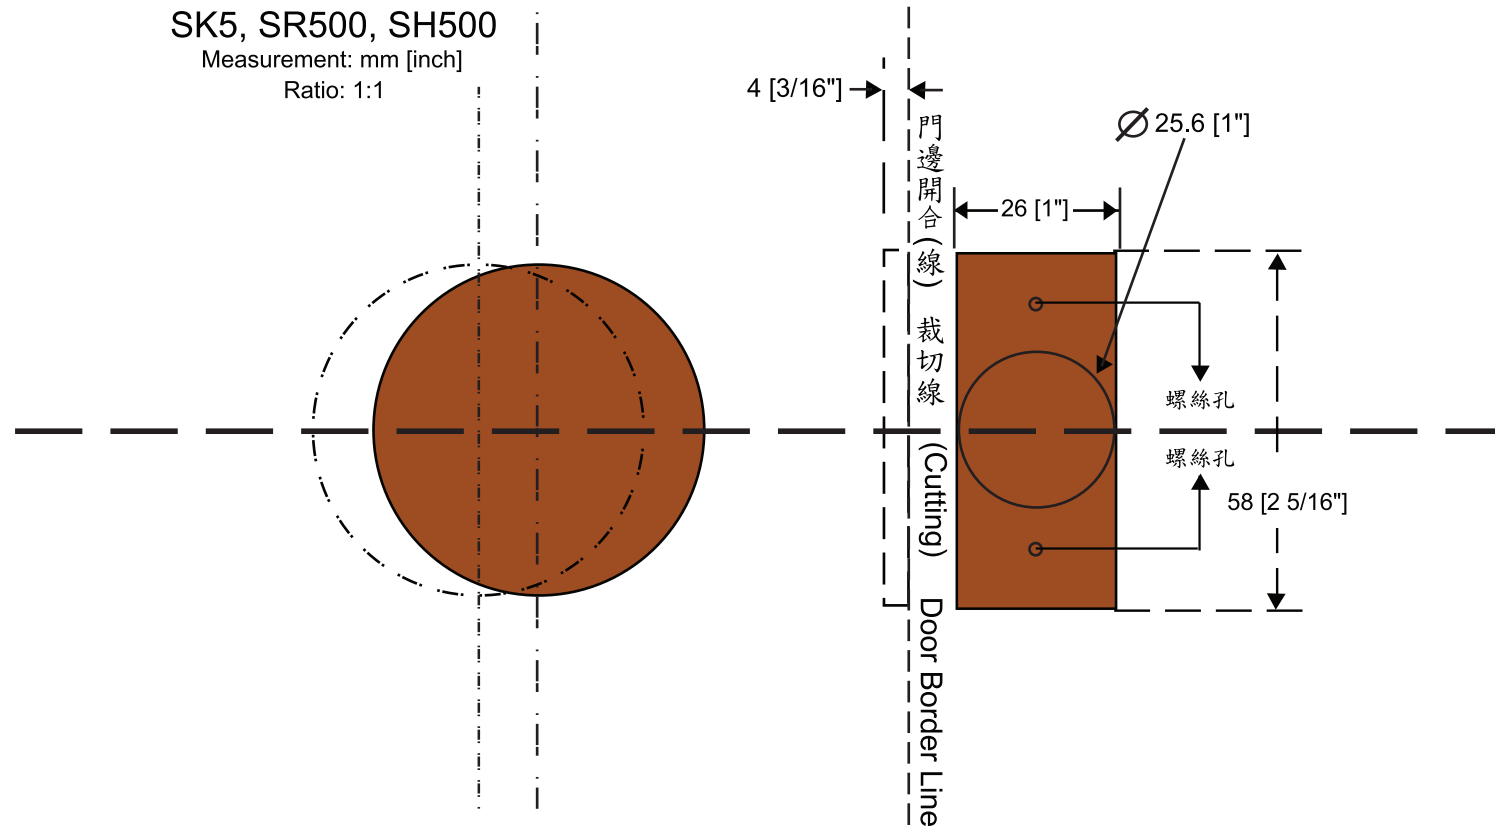

# SR500 USER INSTRUCTIONS

The SR500 is programmed to remain locked at all times, requiring card access. It can also be programmed to remain unlocked (passage mode) at all times, allowing open access until the MASTER CARD is used. The door locks automatically 1.5 seconds after the lever returns to the original horizontal position. Please follow instructions below for programming.

## Master Card Setup

Press the button at the back for 5 seconds (long beep) and place the card to the sensor. The first card to be encoded is the master card.

## Regular Card Added/Deleted

- 1.Press the button at the back for 3 seconds (long beep) to enter setup mode.
- 2.Place the master card to the sensor.
- 3.Place the "Regular Card" to the sensor one by one to add (long beep)/to delete regular card repeat steps 1, 2 and 3 (short beep)/delete (short beep)

## Passage Mode Setup (Blue light flashes during passage mode)

- 1.Place the master card to the sensor.
- 2.Press the button at the back one time to enter passage mode.
- 3.To return to locked mode, place the master card to the sensor twice.

## Cancel all cards at one time by using Master Card

- 1.Press the button at the back until one short beep, then release the button.
- 2.Place the master card to the sensor.
- 3.Press the button at the back for 5 seconds until a long beep and a short beep sounds.

## Factory Default Settings if Master Card is Lost

- 1.Remove one battery.
- 2.Next, while continuously pressing the button on the back reinstall the battery.
  - One beep during setup indicates successful reset.
  - Three beeps and red light during reset indicates operation failure. Repeat steps 1 & 2 above


## Low Battery Alert

- Normal operation accompanied with 5 beeps in a row. Please change batteries.
- Card memory function. No need to re-encode the cards after battery replacement.
  - Please use alkaline batteries only.

## Care & Maintenance

- To preserve the appearance of the product, wipe down using a clean cloth. Do not use alcohol or other chemical agents.

## Product Overview

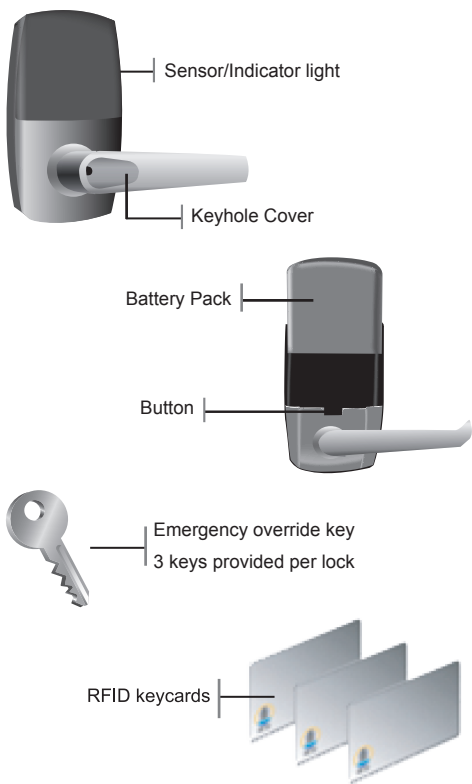

*\*The picture is for reference only. Please check the actual model for specifications.*

## Unlocking Methods

Keycards: simply place the card close to the sensor.  
Key: the keyhole is in the lever of the front lever.

## Types of Cards

Master card: First card to be encoded.  
Regular cards: Remaining 99 cards.

## Modes of Operation

Locked Mode: Requires card to access.  
Passage Mode: No Card required.

# SR500 INSTALLATION

